

Component side - Componentenzijde - Côte composants - Bauteileseite - Lado de los componentes

# PMK191

**START**

## 1 Resistor - Weerstand - Résistance - Widerstand - Resistencia - Motstand - Vastus - Resistenze



◇ R1...R4: 2K2

(Red, Red, Red) - (Rood, Rood, Rood) - (Rouge, Rouge, Rouge) - (Rot, Rot, Rot) - (Röd, Röd, Röd) - (Punainen, Punainen, Punainen) - (Rojo, Rojo, Rojo) - (Encarnado, Encarnado, Encarnado) - (Rosso, Rosso, Rosso)



◇ R5, R9: 680 ohm

(Blue, Grey, Brown) - (Blauw, Grijs, Bruin) - (Bleu, Gris, Brun) - (Blau, Grau, Braun) - (Blå, Grå, Brun) - (Sininen, Harmmaa, Ruskea) - (Azul, Gris, Marrón) - (Azul, Cinzento, Castanho) - (Blu, Grigio, Marrone)



◇ R6...R8: 1K

 
(Brown, Black, Red) - (Bruin, Zwart, Rood) - (Brun, Noir, Rouge) - (Braun, Schwarz, Rot) - (Brun, Svart, Röd) - (Ruskea, Musta, Punainen) - (Marrón, Negro, Rojo) - (Castanho, Preto, Encarnado) - (Marrone, Nero, Rosso)



◇ R10: 150 ohm


(Brown, Green, Brown) - (Bruin, Groen, Bruin) - (Brun, Vert, Brun) - (Braun, Grün, Braun) - (Brun, Grün, Brun) - (Ruskea, Vihreä, Ruskea) - (Marrón, Verde, Marrón) - (Castanho, Verde, Castanho) - (Marrone, Verde, Marrone)

## 2 Ceramic capacitors




◇ C5: 100nF (104)

## 3 Diode

 


◇ D1: 1N4007

## 13 Battery holder

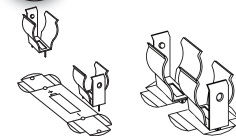

◇ E1, E2


## 14 IC

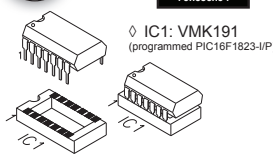

Watch the notch!  
Attention à l'encoche!

◇ IC1: VMK191 (programmed PIC16F1823-I/P)


## 15 Foot

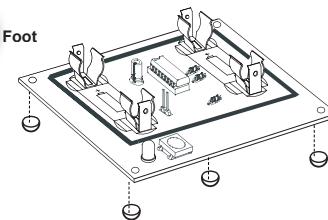

# PMK191-B

**START**


## 1 Resistor - Weerstand - Résistance - Widerstand - Resistencia - Motstand - Vastus - Resistenze

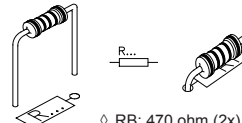

◇ RB: 470 ohm (2x)


(Yellow, Purple, Brown) - (Geel, Paars, Bruin) - (Jaune, Violet, Brun) - (Gelb, Violett, Braun) - (Gel, Lila, Brun) - (Keltainen, Purppura, Ruskea) - (Amarillo, Morado, Marrón) - (Amaro, Violeta, Castanho) - (Giallo, Viola, Marrone) - (Gel, Violett, Brun)

## 2 Push button

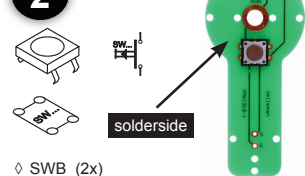

◇ SWB (2x)


## 3 Potentiometer + knob

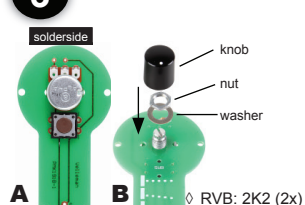

knob  
nut  
washer


◇ RVB: 2K2 (2x)

## 4 Wire

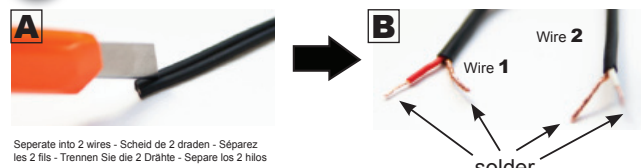

Separate into 2 wires - Scheid de 2 draden - Séparez les 2 fils - Trennen Sie die 2 Drähte - Separe los 2 hilos


## C X2 (L&R)

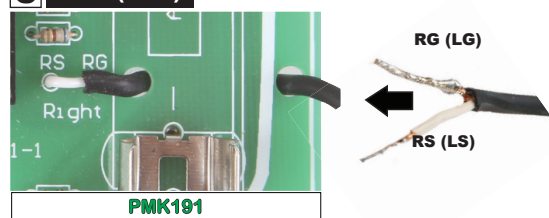


RG (LG)

RS (LS)

## D X2

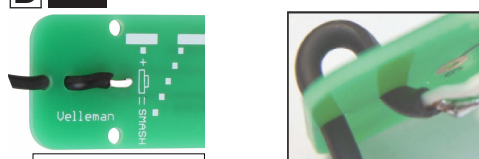


PMK191-B

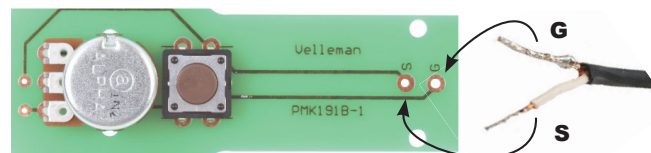


G  
S

## 4 Push button

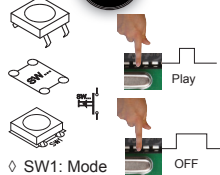


◇ SW1: Mode

## 5 LED

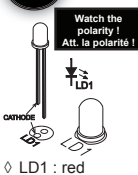


◇ LD1: red

## 6 IC-Socket

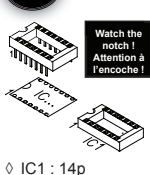


◇ IC1: 14p

## 7 Ceramic capacitors

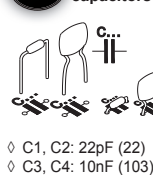


◇ C1, C2: 22pF (22)  
◇ C3, C4: 10nF (103)

## 8 Horizontal Trimmer

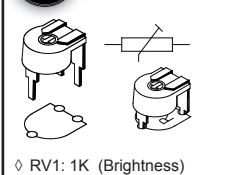

◇ RV1: 1K (Brightness)


## 9 SK4: Video signal selector

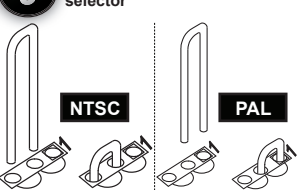

NTSC

PAL

## 10 Electrolytic capacitors

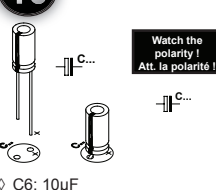


◇ C6: 10µF

## 11 Cinch Connectors



◇ AUDIO OUT  
◇ VIDEO OUT

## 12 Crystal

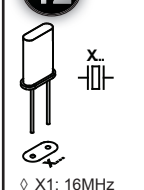

◇ X1: 16MHz